

FILTER IS LOCATED IN THE AIRBOX

HOW TO CLEAN

- 1** Start by unclipping the airbox to take the Ryco NanoCel® Performance Air Filter out.
- 2** Keep the filter with the face (honeycomb structure) up.
- 3** Using compressed air, holding the nozzle about 10cm away from the filter, never exceeding 40 psi/7 bar, clean out the dust trapped in the filter. Repeat this until little to no dust falls out the bottom of the filter.
- 4** Before fitting the filter back in the airbox, clean the airbox of any dust or leaves.
- 5** Once complete, put the filter back into the airbox the same as it was originally fitted, and do up the clips.

NOTE: Ryco NanoCel® Performance Air Filters should be replaced after the fourth clean or when the vehicle reaches its service interval, whichever comes first. Usage should never exceed either of these.



IMAGE 1
Filter removal from airbox.

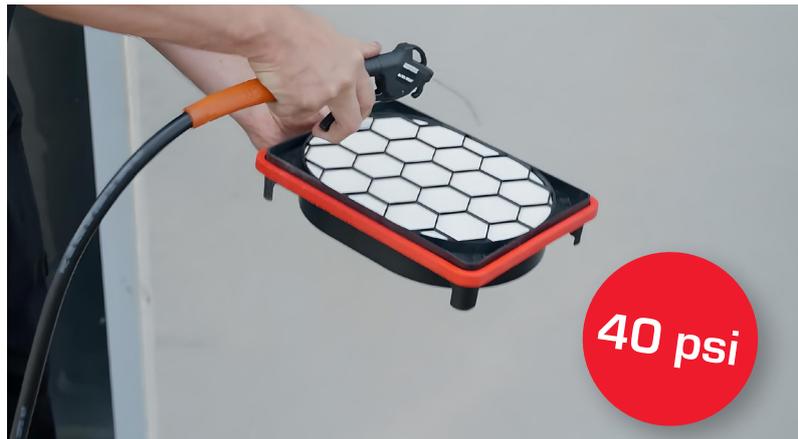


IMAGE 2
Clean out the dust trapped in the filter.



IMAGE 3
Put the filter back into the airbox the same as it was originally fitted.