



HDA5978

- 1 Apply thin film of grease around the outer seal of the Ryco air filter HDA5978
- 2 Insert Ryco inner air filter HDA5978 into Ryco outer air filter HDA5878

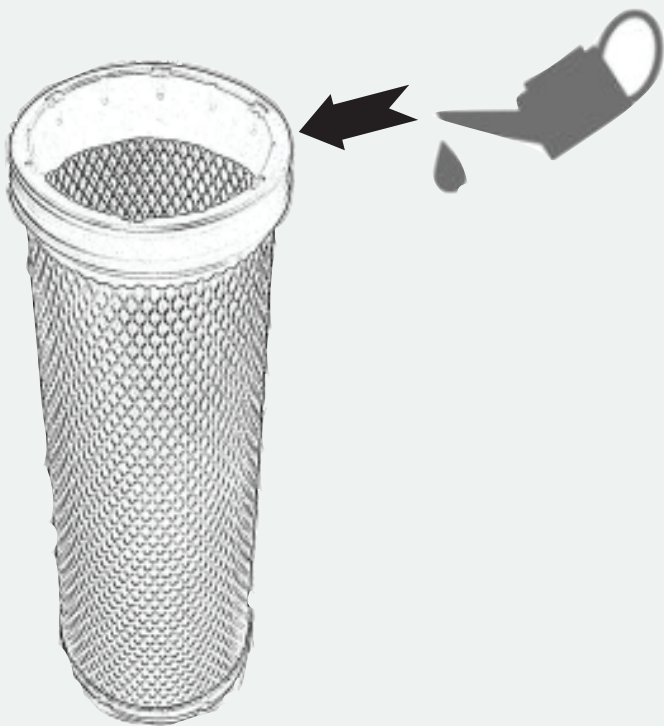

STEP 1

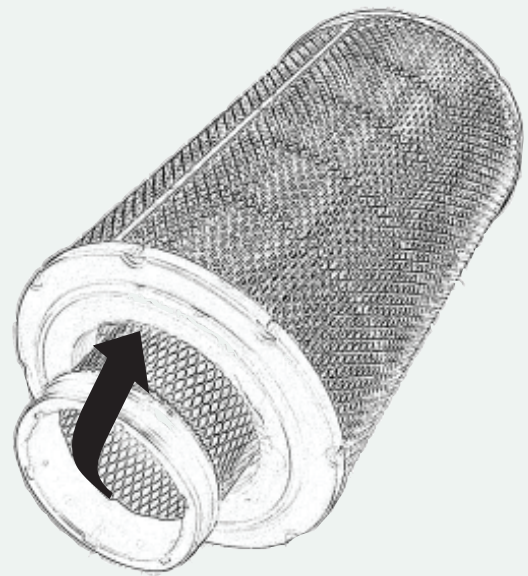

STEP 2