

FILTER IS LOCATED IN THE AIRBOX



### STEP 1

Start by undoing the clips on the intake airbox, lift the lid away and remove the old air filter.



### STEP 2

From there, give the airbox a good clean.




### STEP 3

Place the new Ryco NanoCel® Performance Air Filter inside. Make sure it is face (honeycomb structure) up.



### STEP 4

Check that the filter's seal is properly placed within the airbox.

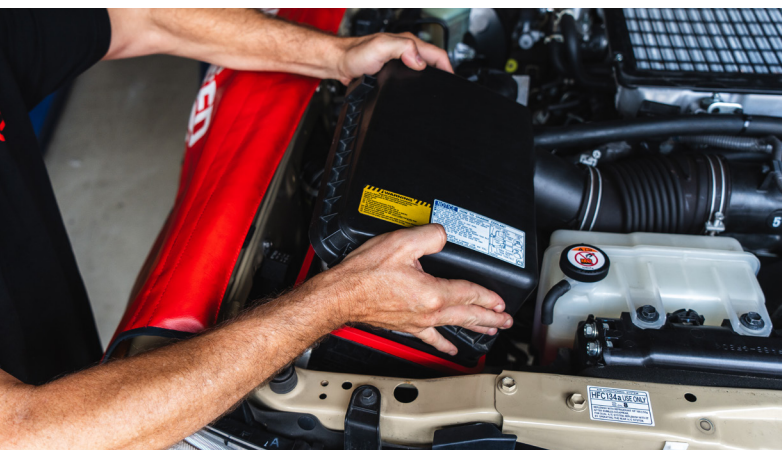

### STEP 5

Refit the airbox lid



### STEP 6

Clip it back to the housing.