

WORK PROCEDURE

- 1 The filter element is placed in the housing, with the arrows aligned.
- 2 The hooks of the filter element are positioned in the correct place of the housing.
- 3 The hooks of the filter element are engaged into the holes of the housing. This is considered crucial for proper assembly.



FIGURE 1

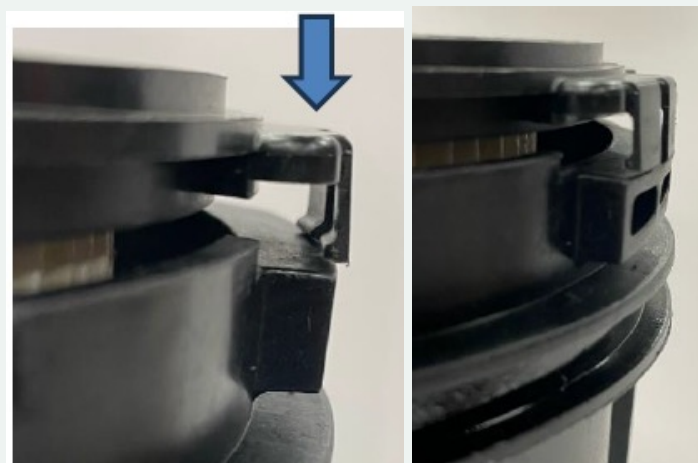


FIGURE 2

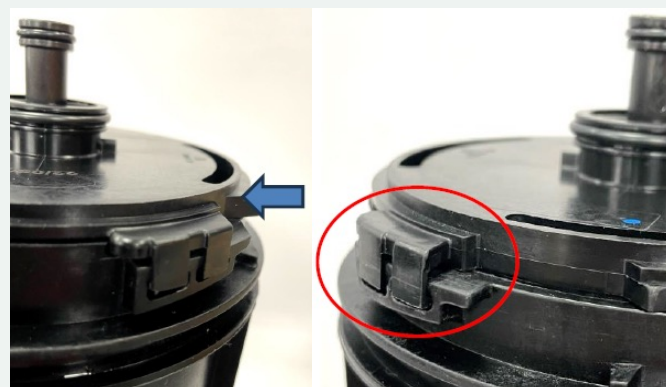


FIGURE 3

RYCO R2779P FITTING INSTRUCTION

WORK PROCEDURE

- 4 The filter assembly arrow is aligned with the unlocked housing arrow. The cap is then pushed in the rotated 10° left until it locks into place. RST224 tool is used to help lock the filter in place.
- 5 The top cover should be then secured.

Remarks:

The filter can be installed in the housing, provided that the procedures are followed according to the assembly instructions. The filter element is fully assembled and made functional.



FIGURE 5



FIGURE 6